

# Floor Tape Applicator



- Apply tape to floor while standing.
- makes straight lines with ease.
- handles tapes up to 4 inches wide.
- 4.5 inch diameter maximum

## Directions



Remove the axle and wheel assembly.



Remove the holding clip (small pliers may be required)



Remove the spring.



Remove the top portion of the tape-wheel.  
You are now ready to insert your tape roll.



Reassemble the axle.  
Place the axle into the applicator so that **the adhesive side is facing you**.  
(see illustration)  
Place the tape so that it rides on the front side of the pressure wheel, and secure the tape to the floor.



You are now ready to apply the tape simply by pushing the applicator.



**Adhesive Side**